



ReFill Filament Spool

How to use ReFill filament with Bambu Lab Reusable Spool

The [Filamentive-BambuLabSpoolAdapter.STL](#) is an adapter plate that needs to be used to adapt the notched interface of a BambuLabs spool to the refill:

1. Place one half of the BambuLabs reusable spool on a flat surface (notched side)
2. Place the adapter, taking note of the notch, onto the half of the reusable spool
3. Place the refill (with the Velcro still intact) onto the adapter.
4. Place the other half of the BambuLabs reusable spool and spin to lock in place.
5. Remove the Velcro straps
6. Print!

Using the Filamentive Masterspool for ReFill Filament

The [Filamentive-Masterspool REV3.STL](#) is the adapter that needs to be printed twice to be used with the refills:

1. Place one of the printed masterspool halves on a flat surface.
2. Place the refill (with its Velcro still intact) onto the middle core of the masterspool.
3. Ensure that the Velcro bands are in line with the rounded rectangular cutouts that go from the middle of the spool to the outer edge of the spool.
4. Place the 2nd half of the masterspool over the refill, ensuring that the material is kept firmly between the two printed pieces.
5. Using the rectangular cutouts, unwrap the Velcro straps.
6. Print!